




EXCELLENCE IN ROOFING

RENOLIT *WATERPROOFING*



Rely on it.

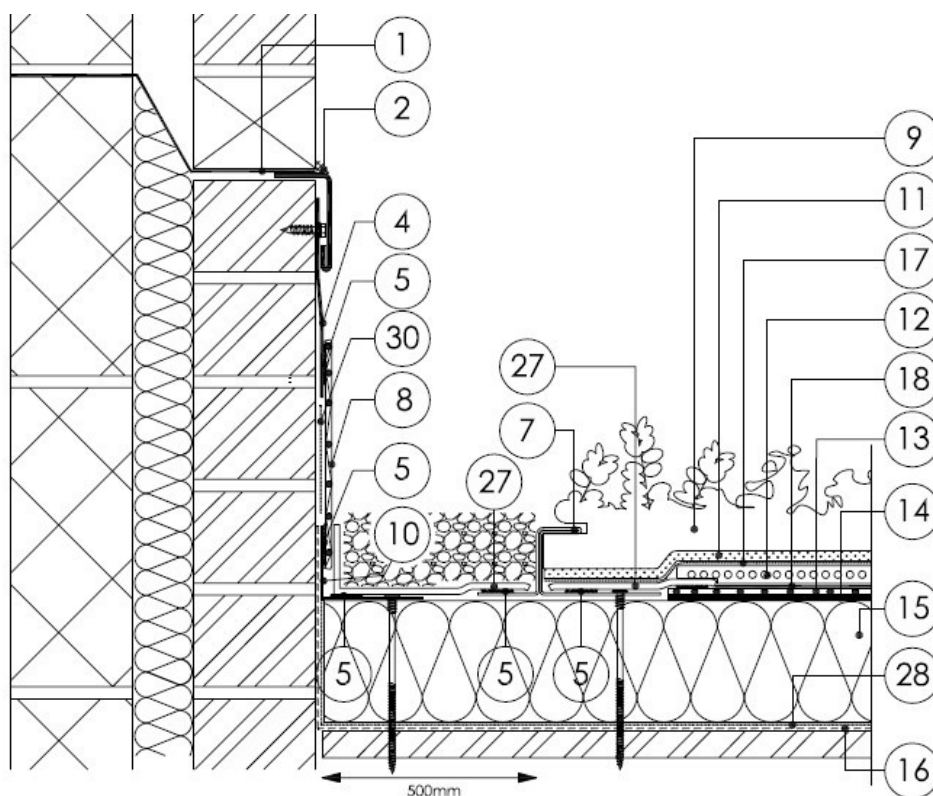

Wall upstand detail

1. CAVITY TRAY IF PRESENT MUST BE SITUATED ABOVE LEAD FLASHING 'BY BRICKWORK CONTRACTOR'
2. LEAD FLASHING TO BE LEAD PLUGGED TO HOLD FLASHING. PLUGS TO BE FIXED AT 300MM CENTRES. CHASE & FLASHING TO BE POINTED IN MASTIC SEALANT 'BY PLUMBER'
4. RENOLIT ALKORPLAN-METAL TRIM FIXED TO MASONRY (AT 250 C/S)
5. HEAT WELD
7. PVC-U DRAINAGE TRIM
8. RENOLIT ALKORPLAN F 35176/35276 MEMBRANE
9. SEDUM FOLIAGE
10. RENOLIT ALKORPLAN METAL TRIM
11. RENOLIT ALKORPLUS 81017 SEDUM BLANKET
12. RENOLIT ALKORPLUS 81015 FILTER & DRAINAGE MAT
13. RENOLIT ALKORPLAN LA 35177 MEMBRANE 1,5 MM THICK
14. RENOLIT ALKORPLUS 81065/81068 PU ADHESIVE
15. PIR INSULATION GLASS TISSUE FACED
16. RENOLIT ALKORPLUS 81002 SELF ADHESIVE VAPOUR CONTROL LAYER
17. RENOLIT ALKORPLUS 81016 WATER RETENTION LAYER
18. RENOLIT ALKORPLUS 81014 SLIP LAYER
27. RENOLIT ALKORPLAN L 35177, NOT FLEECE BACKED
28. RENOLIT ALKORPLUS 81168 PU ADHESIVE
30. RENOLIT ALKORPLUS FLEECE PROTECTION LAYER



RENOLIT waterproofing
Excellence in roofing