




EXCELLENCE IN ROOFING

RENOLIT *WATERPROOFING*



Rely on it.

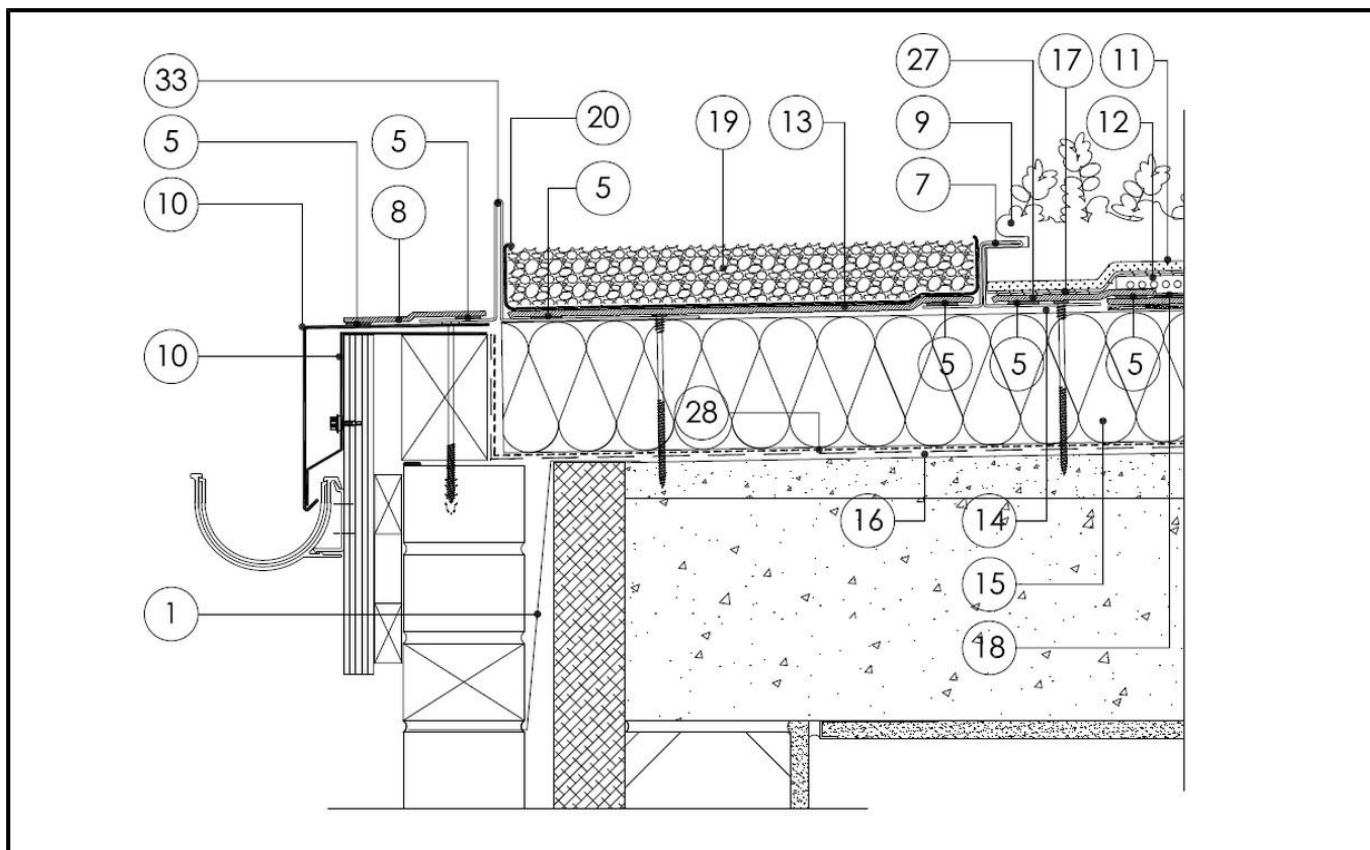

Ballast stop detail

1. CAVITY TRAY IF PRESENT MUST BE SITUATED ABOVE LEAD FLASHING 'BY BRICKWORK CONTRACTOR'
5. HEAT WELD
7. PVC-U DRAINAGE TRIM
8. RENOLIT ALKORPLAN F 35176/35276 MEMBRANE
9. SEDUM FOLIAGE
11. RENOLIT ALKORPLUS 81017 SEDUM BLANKET
12. RENOLIT ALKORPLUS 81015 FILTER & DRAINAGE MAT
13. RENOLIT ALKORPLAN LA 35177 MEMBRANE 1,5 MM THICK
14. RENOLIT ALKORPLUS 81065/81068 PU ADHESIVE
15. PIR INSULATION GLASS TISSUE FACED
16. RENOLIT ALKORPLUS 81002 SELF ADHESIVE VAPOUR CONTROL LAYER
17. RENOLIT ALKORPLUS 81016 WATER RETENTION LAYER
18. RENOLIT ALKORPLUS 81014 SLIP LAYER
19. GRAVEL TO SPECIFICATION
20. RENOLIT ALKORPLAN 35121 PROTECTION MEMBRANE
27. RENOLIT ALKORPLAN L 35177, NOT FLEECE BACKED
28. RENOLIT ALKORPLUS 81168 PU ADHESIVE

30. PVC-U TRIM



RENOLIT waterproofing
Excellence in roofing