




EXCELLENCE IN ROOFING

RENOLIT *WATERPROOFING*



Rely on it.

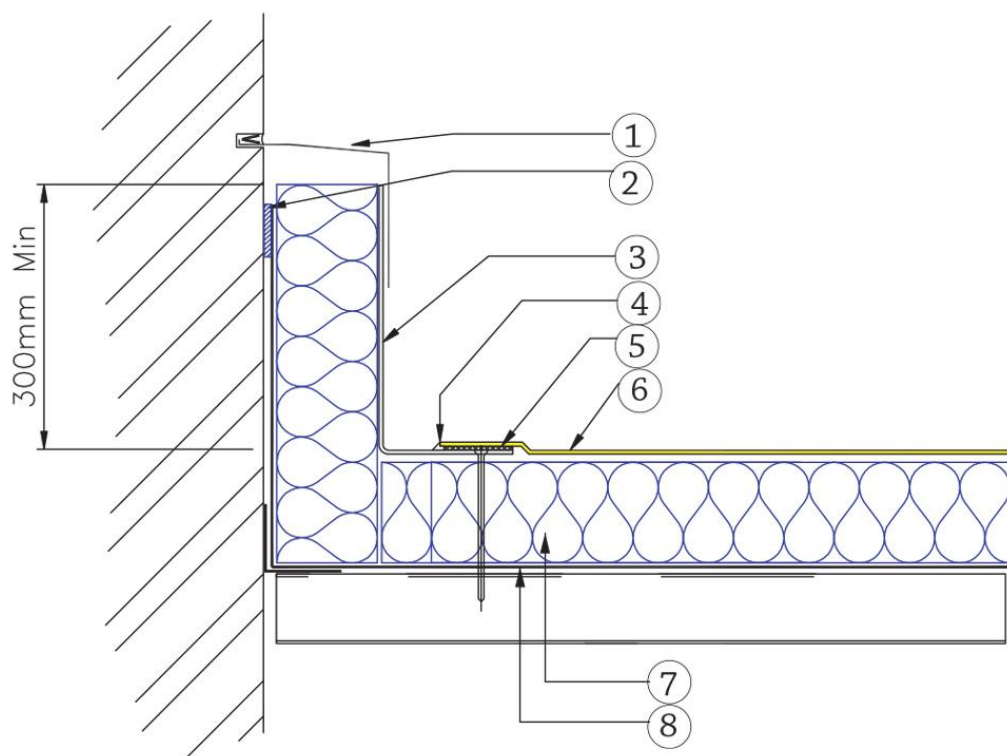

Typical Wall Abutment

1. LEAD FLASHING TO BE LEAD PLUGGED TO HOLD FLASHING. PLUGS TO BE FIXED AT 300MM CENTRES. CHASE & FLASHING TO BE POINTED IN MASTIC SEALANT 'BY PLUMBER'
2. VAPOUR CONTROL LAYER SEALED 'CONTINUOUS'
3. RENOLIT ALKORPLAN METAL TRIM
4. RENOLIT ALKORPLUS 81038 SEAM SEALER
6. HEAT WELD
6. RENOLIT ALKORPLAN F 35176/35276 MEMBRANE
7. INSULATION
8. RENOLIT ALKORPLUS 81012 VAPOUR CONTROL LAYER