




EXCELLENCE IN ROOFING

RENOLIT *WATERPROOFING*



Rely on it.

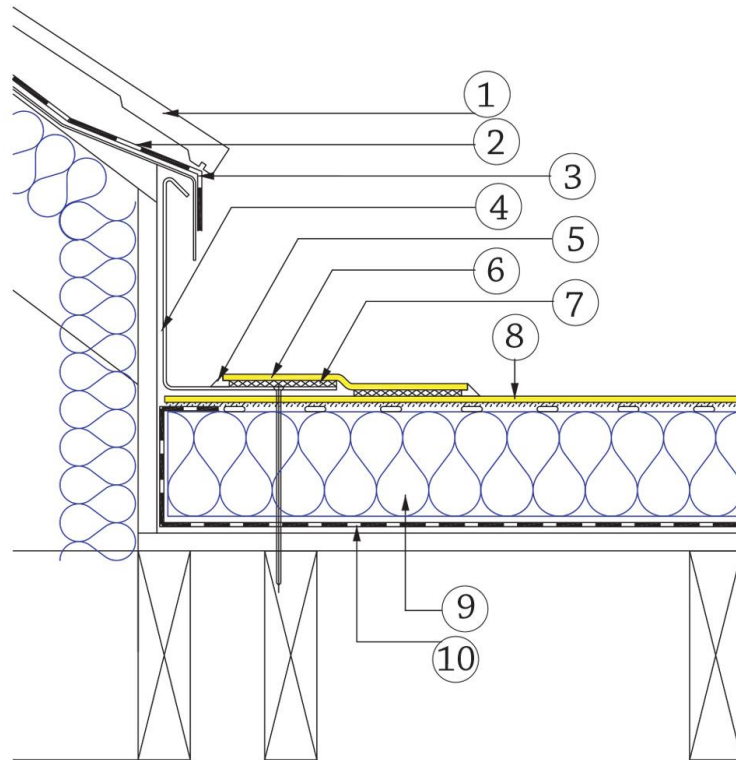

Typical Upstand to Base of Tiled Roof

1. ROOF TILING
2. SARKING FELT/TILING UNDERLAY
3. LEAD FLASHING TO BE LEAD PLUGGED TO HOLD FLASHING. PLUGS TO BE FIXED AT 300MM CENTRES. CHASE & FLASHING TO BE POINTED IN MASTIC SEALANT 'BY PLUMBER'
4. RENOLIT ALKORPLAN METAL TRIM
5. RENOLIT ALKORPLUS 81038 SEAM SEALER
6. 200 MM WIDE RENOLIT MEMBRANE JUNCTION STRIP
7. HEAT WELD
8. RENOLIT ALKORPLAN A 35179
9. INSULATION
10. RENOLIT ALKORPLUS 81002 SELF ADHESIVE VAPOUR CONTROL LAYER